
i10

QUICK REFERENCE GUIDE



www.hyundai.co.in

Customer Relation: 1-800-11-4645
096-7356-4645
or@hmi.net

PREFACE

Welcome to the Hyundai family! Thank you for choosing a Hyundai i10 and we assure you years of driving pleasure.


Start enjoying your new Hyundai i10 the minute you start reading this manual. In this manual, you will learn how to operate your car – right from the driving controls to all other instruments and convenience items.

Maintaining your car according to the directions given in this manual will help keep your car trouble-free while it preserves your investment.

When in need of maintenance or any other kind of assistance, please feel free to contact your Hyundai dealer. We will be pleased to answer all your questions and concerns.


Wishing you all the best!

INSTRUMENT PANEL & OTHER CONTROLS

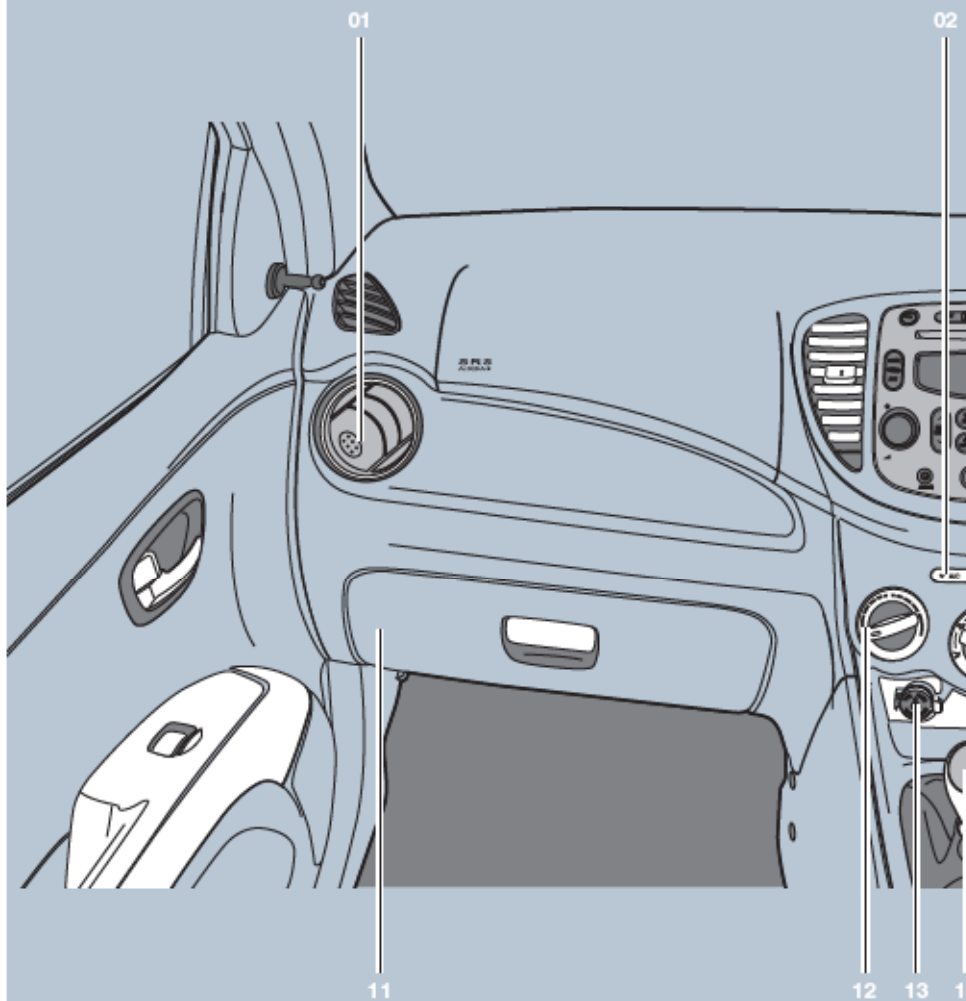

- 01. Side Air Vent Louver
- 02. AC "ON / OFF" Switch
- 03. Air Intake Control
- 04. Audio System
- 05. Wind Shield Wiper / Washer switch

- 06. Tachometer
- 07. Speedometer
- 08. Fuel Gauge
- 09. Headlight/ Directional Signal Light Switch
- 10. Outside Rear View mirror control

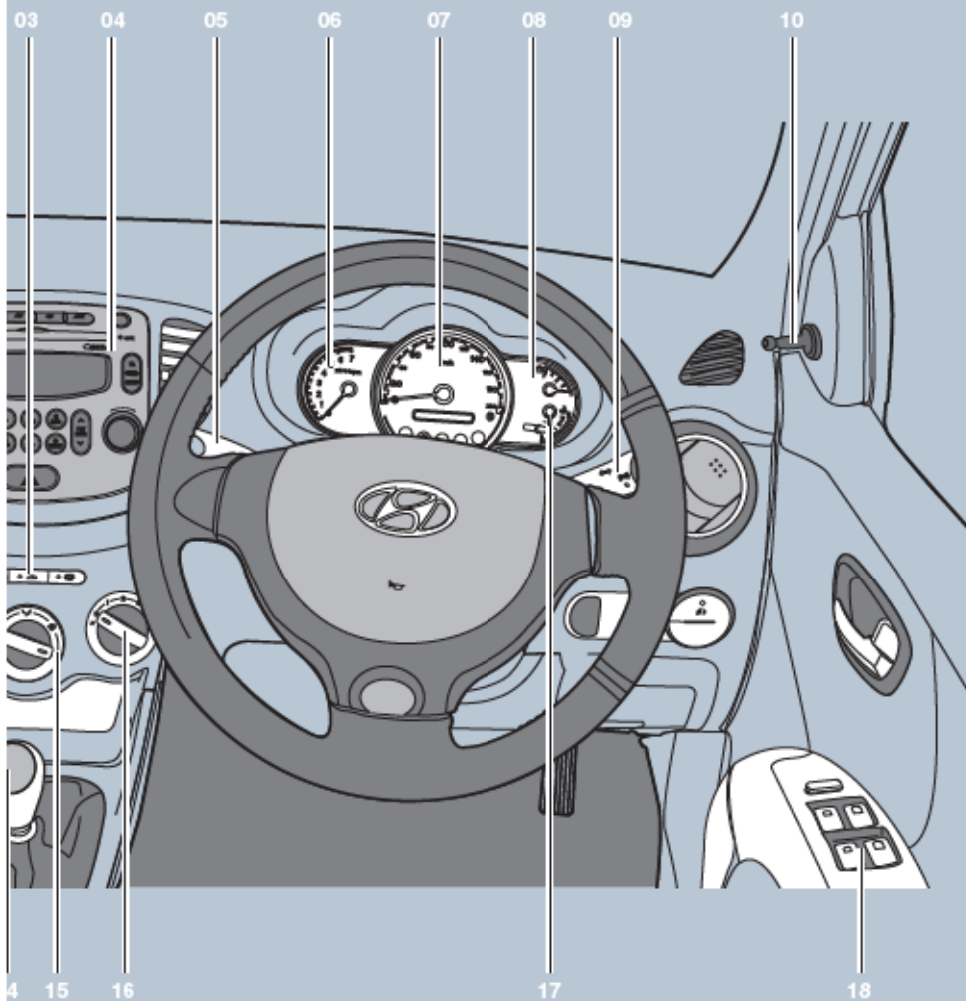

- 11. Glove Box
- 12. Temperature Control
- 13. Power Outlet
- 14. Transmission

- 15. Air Flow Control
- 16. Fan Speed control
- 17. Engine Temperature Gauge
- 18. Power Windows Switch

HOW TO OPERATE CLIMATE CONTROL SYSTEM



1. Temperature Control

This is used to turn the heating system on and off and to select the degree of heating desired.

2. AC "ON/OFF" Switch

The air conditioning is turned on by pushing the AC button.

3. Air Intake Control

This allows you to select fresh outside air or to recirculate inside air.

4. Air Flow Control

This is used to direct the flow of air. Air can be directed to the floor, dashboard outlets or windshield.

5. Fan Speed Control

This is used to turn the blower fan on and off and to select the fan speed.

6. Rear Window Defroster Switch*

* if equipped

HOW TO PREVENT WINDSHIELD FOGGING



a) To prevent internal fog on windshield

- Use fresh air intake mode when A/C is OFF
- Use A/C when its rain or high humidity season.

b) To prevent external fog on windshield

- Operate A/C at low speed (Using A/C with high speed for long time, cause external window fogging.)
- Do not turn the air vent louvers towards window side.

c) To remove internal fog on windshield

- Set air intake to fresh air mode 
- Set air flow to defrost 
- Turn "ON" the A/C.
- Set temperature control to desired position.
- Set fan speed as required.


d) To remove external fog on windshield

- Close air damper of side vent louvers or change air direction not to side window.
- Operate A/C at low speed.
- Operate windshield wiper if you need.

e) Use Rear Defogger Switch to clear Rear Windshield fog (If installed)


- The rear windshield defroster is turned ON by pushing the switch.
- After switching ON, defogger turns OFF automatically within 20 minutes
- Use same switch to switch 'ON' and 'OFF'

DOES YOUR A/C GET COLD ENOUGH?

- If the interior of the car is hot when you first get in, open the window for a few minutes to expel the hot air.
- Set the recirculation mode  for higher A/C performs.
- Do not speed up quickly of your car. (the sudden acceleration can stop A/C for second.)
- Clean the A/C filter often. (if installed).

DAY/NIGHT REAR VIEW MIRROR (IF EQUIPPED)

- Your Hyundai i10 is equipped with a day/night inside rear view mirror.
- The "night" position is selected by flipping the tab at the bottom of the mirror toward you. In the "night" position, the glare of headlights of cars behind you is reduced.

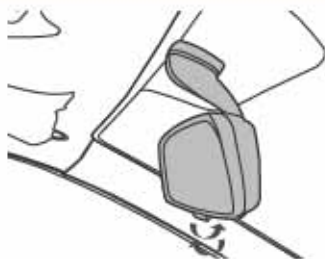

ADJUSTING THE OUTSIDE REAR VIEW MIRROR

MANUAL CONTROL (IF EQUIPPED)

The outside rear view mirrors are equipped with a control lever inside the cabin for your convenience.

To adjust an outside mirror, move the control lever located at the forward inside area of the window frame.



TILT STEERING WHEEL (IF EQUIPPED)

TO ADJUST THE STEERING WHEEL:

1. Push the lever downward to unlock.
2. Raise or lower the steering wheel to the desired position.
3. After adjustment, securely tighten the lever by pulling it upward.

NOTE: Do not adjust while driving.




FOR SMOOTH GEARSHIFTING

- Hyundai i10 has five forward and one reverse gear.
- The shift pattern is imprinted on the shift knob.



Note:

- The clutch should be pressed all the way to the floor before gear shifting then released slowly after finishing gear change for smooth acceleration.
- When blocking happens during shift into reverse gear, slightly lift your foot to a quarter to the full stroke while pushing the lever to the reverse gear direction.
- There can be gear grinding noise if you shift into "R" position too quickly or with vehicle moving. To prevent it, move the lever into the "R" position after your car is completely stopped.

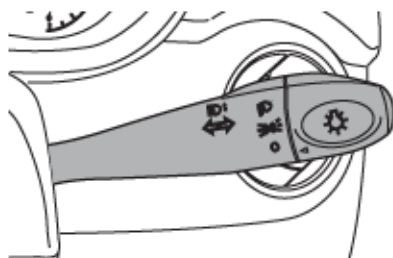

HEADLIGHTS

To operate the headlights, turn the switch on the end of the lever:

OFF – Headlights are off

 – Parking lights

 – Headlights


NOTE: The ignition must be in the ON position to turn on the headlights.

High Beam Activation: Push the lever forward. (away from you)

Flash-To-Pass Feature: Pull the lever toward you and release.

USING HEADLAMP LEVELING DEVICE

Headlight beam should be adjusted according to the number of passengers and the loading weight in the luggage area. The higher the number of the switch position, the lower the headlight beam level.

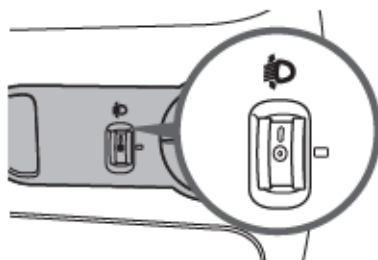

Listed below are the examples of proper switch settings.

Loading condition	Switch Position
Driver only	0
Driver + front passenger	0
Full passengers (including Driver)	1
Full passengers (including Driver) + full trunk Loading	2
Driver + Maximum permissible loading	3

HOW TO REMOVE HEADLIGHT CONDENSATION / MOISTURE


- After heavy rain or washing, mist/moisture can be formed inside headlight and taillamps due to temperature difference between lamp inside & outside.
- To remove the moisture formed inside the headlamp. Switch ON the headlamps for 30 minutes and the moisture will automatically disappear within 30 minutes.

FRONT FOG LIGHT SWITCH (IF EQUIPPED)

Fog lights are used to provide improved visibility in fog, rain or snow, etc. The fog lights will turn on when fog light switch is pressed after the ignition switch is in the ON position and the parking light is turned on. To turn off the fog lights, press the switch again.



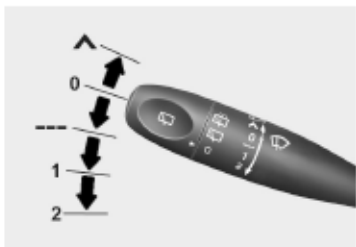

FOR CLEAR VISIBILITY DURING DRIVING



WIPER SPEED

The windshield wiper switch has three positions: intermittent, low speed and high speed. For mist (single wipe), move the lever up one position.

REAR WIPER / WASHER (If Installed)

- 0 – Wiper is not in operation
-  – Normal wiper operation
-  – Spraying washer fluid and wiping




WIPE / WASH OPERATION

To use the windshield washer, pull the wiper/washer lever toward you. When the washer lever is operated, the wipers automatically make three passes across the windshield. The washer continues to operate until the lever is released.

INTERMITTENT OPERATION

- ^ : For a single wiping cycle, push the lever upward and release it with the lever in the OFF position. The wipers will operate continuously if the lever is pushed upward and held.
- 0 : Wiper is not in operation
- : Wiper operates intermittently at the same wiping intervals. Use this mode in a light rain or mist. (if equipped)
- 1 : Normal wiper speed
- 2 : Fast wiper speed

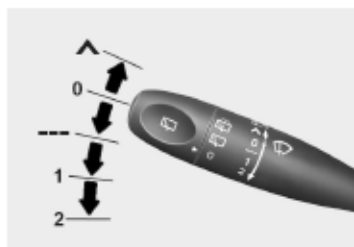

Note:

- Use water additive for better wiping
- Get the Wiper inspected for proper cleaning & replace before monsoons.
- Lift the wiper blade while long parking for proper usage & life of wiperhead.

POWER WINDOWS (IF EQUIPPED)

POWER WINDOWS (if equipped)

The ignition switch must be in the on position for power windows to operate. Each door has a power window switch that controls the door's window.

The windows may be opened by depressing the appropriate window switch and closed by pulling the switch up.

AUTO DOWN-DRIVER'S WINDOW (if equipped)

To fully open the window automatically, press the switch fully down.

WINDOW LOCK SWITCH (if equipped)


To disable all passenger power windows, press the window lock switch located on the driver's armrest. To revert to normal operation, press the window lock switch a second time.



TRIPMETER

The tripmeter indicates the distance of individual trips selected. Tripmeter can be selected by pressing the trip mode/reset button for less than 1 second and then releasing.

Tripmeter can be reset to 0.0 by pressing the trip mode/reset button for more than 1 second.

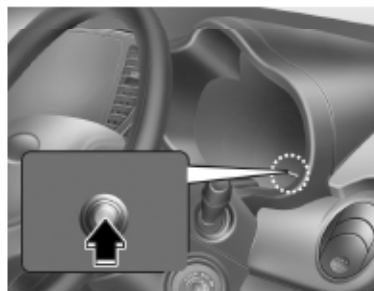


HAZARD WARNING FLASHER

The hazard warning flasher should be used whenever you find it necessary to stop the vehicle in a hazardous location.

The hazard warning lights are turned on by pushing in the hazard switch. This causes all turn signal lights to blink. The hazard warning lights will operate even though the key is not in the ignition switch.

To turn off the hazard warning lights, push the hazard switch.



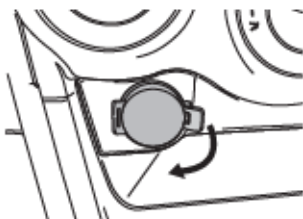


POWER OUTLET (IF EQUIPPED)

When the ignition switch is in the ACC or ON position, the power outlet can be used. The power outlet is designed to provide power for mobile telephones or other devices designed to operate with vehicle electrical systems. The devices should draw less than 10 amps with the engine running.

IGNITION KEY REMINDER (IF EQUIPPED)

If the driver's door is opened while the ignition key is left in the ignition switch (ACC or LOCK position), the key reminder warning chime will sound. This is to prevent you from locking your keys in the vehicle. The chime sounds until the key is removed from the ignition switch or the driver's door is closed.

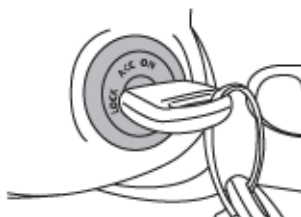


P1 RECOMMENDED INFLATION PRESSURE-COLD						
RIM SIZE	TIRE SIZE	MAX LOAD (INDEX)	PRESSURE KPA (PSI)			
			NORMAL LOAD		MAXIMUM LOAD	
			FRONT	REAR	FRONT	REAR
48x13	85/80 R13	420 kg (93)	200 (29)	230 (33)	250 (36)	250 (36)

THE TIRES FITTED TO THIS VEHICLE SHALL HAVE A MAX LOAD RATING NOT LESS THAN 437 kg OR A LOAD INDEX OF 75 AND A SPEED CATEGORY NOT LESS THAN T

INFORMATION ON VEHICLE PULLING


- Keep the recommended tire pressure (33 psi).
- Indian roads have slope towards the outer side (3° ~ 6°), which may cause the vehicle to drift outwards.

- While driving, always hold the steering wheel lightly as shown in the photo so that the vehicles move straight.

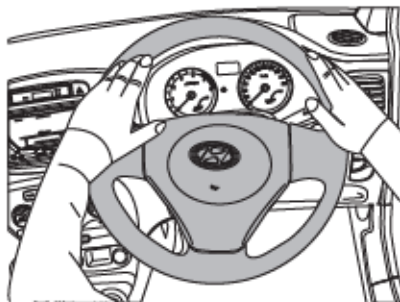

CHILD-PROTECTOR REAR DOOR LOCK

- To engage the child-protector feature so that the door cannot be opened from the inside.
- Move the child-protector lever to the "LOCK" position and close the door.
- Move the lever to the "UNLOCK" position when normal door operation is desired.
- To open the door from the outside, pull the outside door handle.

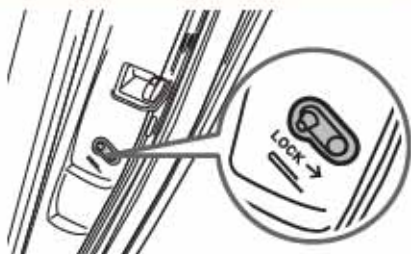

REMOTE KEYLESS ENTRY (IF EQUIPPED)

THEFT-ALARM SYSTEM (IF EQUIPPED)


Armed stage

Park the vehicle and stop the engine. Arm the system as described below.

1. Remove the ignition key from the ignition switch and exit the vehicle.
2. Make sure that all doors (and tailgate) and engine hood are closed and latched.
3. Lock the doors using the transmitter of the keyless entry system.

After completion of the steps above, the hazard warning lights will blink once to indicate that the system is armed.

If any door (or tailgate) or engine hood remains open, the hazard warning lights will not operate and the theft-alarm will not arm. If all doors (and tailgate) and engine hood are closed after the Lock/Unlock button is pressed, the hazard warning lights blink once.

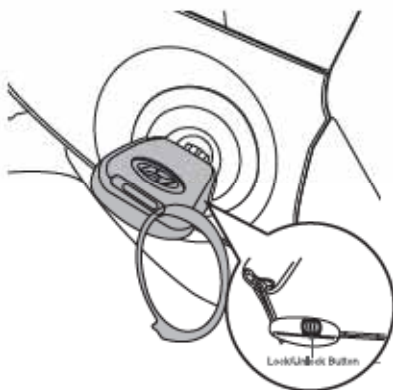

Theft-alarm stage

The alarm will be activated if any of the following occurs while the system is armed.

- A front or rear door is opened without using the transmitter.
- The tailgate is opened without using the transmitter.
- The engine hood is opened.

Disarmed stage

The system will be disarmed when the doors (and tailgate) are unlocked with the transmitter.

After depressing the Lock/Unlock button, the hazard warning lights will blink twice to indicate that the system is disarmed.

After depressing the Lock/Unlock button, if any door (or tailgate) is not opened within 30 seconds, the system will be rearmed.



REMOTE KEYLESS ENTRY (IF INSTALLED)

LOCK

Press button once to lock all doors, when all doors are unlocked.

UNLOCK

Press button once to unlock all doors, when all doors are locked.

CENTRAL DOOR LOCKING SYSTEM (IF INSTALLED)

- Driver's door lock controls the central door locking system.
- When driver's door is locked the passenger doors also get locked automatically.

TO MAKE YOURSELF SIT COMFORTABLY

FRONT SEAT ADJUSTMENT



A. ADJUSTING SEAT FORWARD AND BACKWARD

To move the seat toward the front or rear, pull the lock release lever upward and adjust the seat.

When you find the position you want, "release the lever" and slide the seat forward or backward on its track until it locks into the desired position and cannot be moved.

B. ADJUSTING SEAT BACK ANGLE


Lift the lever on the side of the seat to adjust your seat back angle. Release the lever when you have found a comfortable position.

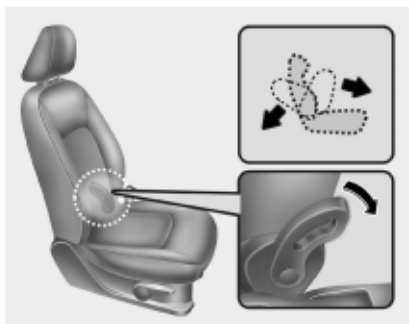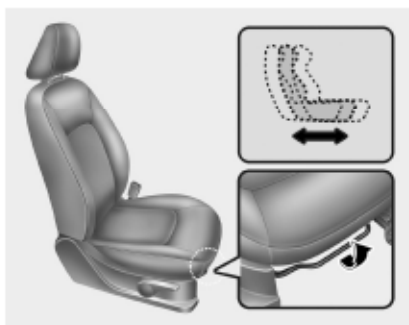

REAR SEAT ADJUSTMENT (IF EQUIPPED)

The rear seatbacks may be folded to facilitate carrying long items or to increase the luggage capacity of the vehicle as per the requirement.

Remove the rear headrests (if equipped)
Pull up the seatback locking knob, then fold the seat toward the front of the vehicle. When you return the seatback to its upright position, always be sure it has locked into position by pushing on the top of the seatback.

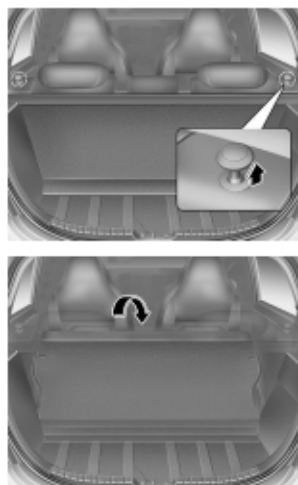

ADJUSTABLE HEADREST (IF EQUIPPED)

Headrests are designed to keep your neck comfortable while driving.

To raise the headrest, pull it up (2). To lower it, push down while pressing the lock knob (1).



REMOTE FUEL-FILLER LID RELEASE (IF EQUIPPED)

The fuel-filler lid may be opened from inside the vehicle by pulling up the fuel-filler lid opener located on the bottom right driver's side of the car.




TAIL GATE RELEASE

Opening the tailgate

- The tailgate is locked or unlocked by turning the key to the "Look" or "Unlock" position.
- If unlocked, the tailgate can be opened by pulling up the handle.

Closing the tailgate


To close the tailgate, lower and push down the tailgate firmly. Make sure that the tailgate is securely latched.

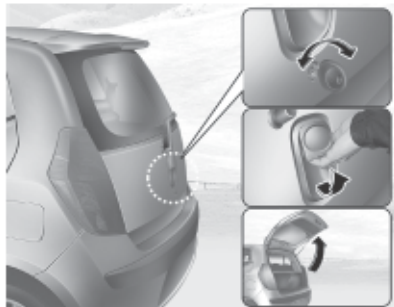

CAR MATS/CARPETS

Precaution for car mats / carpets

- * Use car mats which are anti-slip and custom-fit for your vehicle.
- * If mats are damaged, replace them with new one.
- * Use only Hyundai genuine parts.
- * Floor mat should be fixed with the provided hooks.
- * 2 Hooks at driver seat & 1 hook at passanger seat is provided which prevent floor mat from sliding forward and interfering with the pedals.

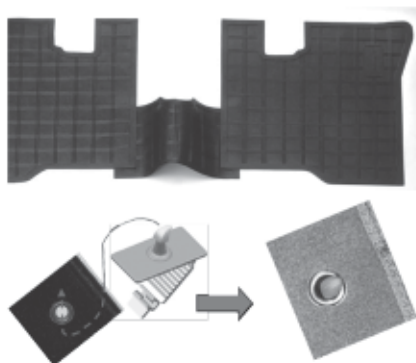

SUNROOF (IF EQUIPPED)

If your vehicle is equipped with a sunroof, you can slide or tilt your sunroof with the sunroof control buttons located on the overhead console.

1. Slide button
2. Tilt button
3. Close button

The sunroof can only be opened, closed or tilted when the ignition switch is in the ON position.



TIPS FOR IMPROVING FUEL EFFICIENCY & PERFORMANCE

Inflate tyres at correct pressure

- Maintain correct tyres pressure (33 psi). Under inflation can add up to 10% extra fuel bill.

Maximise use of 5th gear & drive at cost conscious speed of 45-50 kmph.

- Maximise the use of 5th gear for better fuel economy. 5th over drive gear increases fuel efficiency by 20% to 25% as compared to 3rd gear driving.

Are you driving in low gears to make your engine a fuel-holic?

- Drive your car in correct gear.

Note:

It is wrong to assume the 5th overdrive gear is only for high speed highway driving. Use of 5th overdrive gear in city driving will greatly help to improve fuel economy.

Avoid frequent gear changes, acceleration & braking.

- Avoid frequent gear changes, acceleration & braking through planned driving by looking ahead and judging the speed of other vehicle & timing of traffic lights etc.

Idling car is the devil's workshop.

- Three minutes idling = 1 km lost. Do not keep the engine idling for more than 2 minutes while waiting for somebody, loading or unloading or while being stopped by congested traffic or signal.

Use air conditioner only when it is essential.

- Use air conditioner judiciously as it consumes around 20-25% of total fuel consumed.

Do not ride the clutch pedal.

- Do not ride the clutch pedal. This will cause its slippage resulting in more fuel consumption and damage to the clutch parts.

Regular service saves fuel.

- Get your car regularly serviced & tuned for improved performance (ex. engine oil & filter).

Releasing Parking Brake before take off.

- Releasing Parking Brake fully before take off to avoid straining of Brakes & Engine.

Use Hyundai Genuine oil to increase the mileage.

- If you already know that good engine oil is vital to your engine's long life and smooth performance, it is rather easy to choose one. Use only Hyundai Genuine Oils for Engines, Transmission, Brakes and Radiator Coolant.

Travel lights

- Take all unnecessary load off your car. Avoid carrying stuff you don't require for present trip. Travelling light allows your engine to run smoothly without wasting effort & fuel.



Note :

Driving habit and traffic condition will effect the fuel economy.

SAFETY INFORMATION

BASIC SAFETY PRECAUTIONS

1. Whenever operating the vehicle, make sure that you and your occupants are properly wearing seat belts.
2. Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
3. Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment (if installed).
4. Always refer to the Owner's Manual for complete safety precaution information.
5. Stopping distance increases with increasing vehicle speed. Apply brakes well ahead of the stopping points.

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage *	
	Inspect	Replace	Inspect	Replace
Air Cleaner Filter	10 K	20 K		More Frequently
Engine oil & filter	-	10 K	-	5 K / 6 Months
Vacuum Hose & Crankcase Ventilation Hose	10 K	-		
Air Conditioning Refrigerant (if equipped)	10 K	-		
Automatic Transaxle Fluid (if equipped)	10 K	80 K	10K	45 K
Brake Hoses & Lines	10 K	-		
Brake Pads , Calipers & Rotors	10 K	-	More Frequently	
Drive Shaft & Boots	10 K	-	More Frequently	
Steering Gear Box , Linkage & Boots/Lower Arm Ball Joint	10 K	-	More Frequently	
Suspension	10 K	-		
Brake Fluid	10 K	30 K		
Coolant	10 K	30 K		
Drive Belt (Alt, Water Pump, A/c)	10 K	-		
Fuel Lines , Fuel Hoses & Connections	10 K	-		
Manual Transaxle Oil	10 K	30 K		15 K
Rear Brake Drums/Linings, Parking Brake	10 K	-	More Frequently	
Spark Plugs	10 K	30 K		More Frequently
Timing Belt	-	80 K		60 K
Fuel Filter Cap	20 K	-		
Fuel Filter	10 K	30 K		

*All Units Displayed in Kilometers

For Additional Maintenance Schedule Information See Your Owner's Manual

Looking For More Detailed Information ? This Quick Reference Guide does not replace your vehicle's Owner's Manual . If you require additional information or are unsure of a specific issue , you should always refer to the vehicle's Owner's Manual or contact our authorized Hyundai dealer.