
SANTRO

QUICK REFERENCE GUIDE



www.hyundai.co.in

Customer Relation: 1-800-11-4645
096-7356-4645
or@hmi.net

PREFACE

Welcome to the Hyundai family! Thank you for choosing a Hyundai Santro and we assure you years of driving pleasure.

 
Start enjoying your new Hyundai Santro the minute you start reading this manual. In this manual, you will learn how to operate your car – right from the driving controls to all other instruments and convenience items.

Maintaining your car according to the directions given in this manual will help keep your car trouble-free while it preserves your investment.

When in need of maintenance or any other kind of assistance, please feel free to contact your Hyundai dealer. We will be pleased to answer all your questions and concerns.


Wishing you all the best!

INSTRUMENT PANEL & OTHER CONTROLS

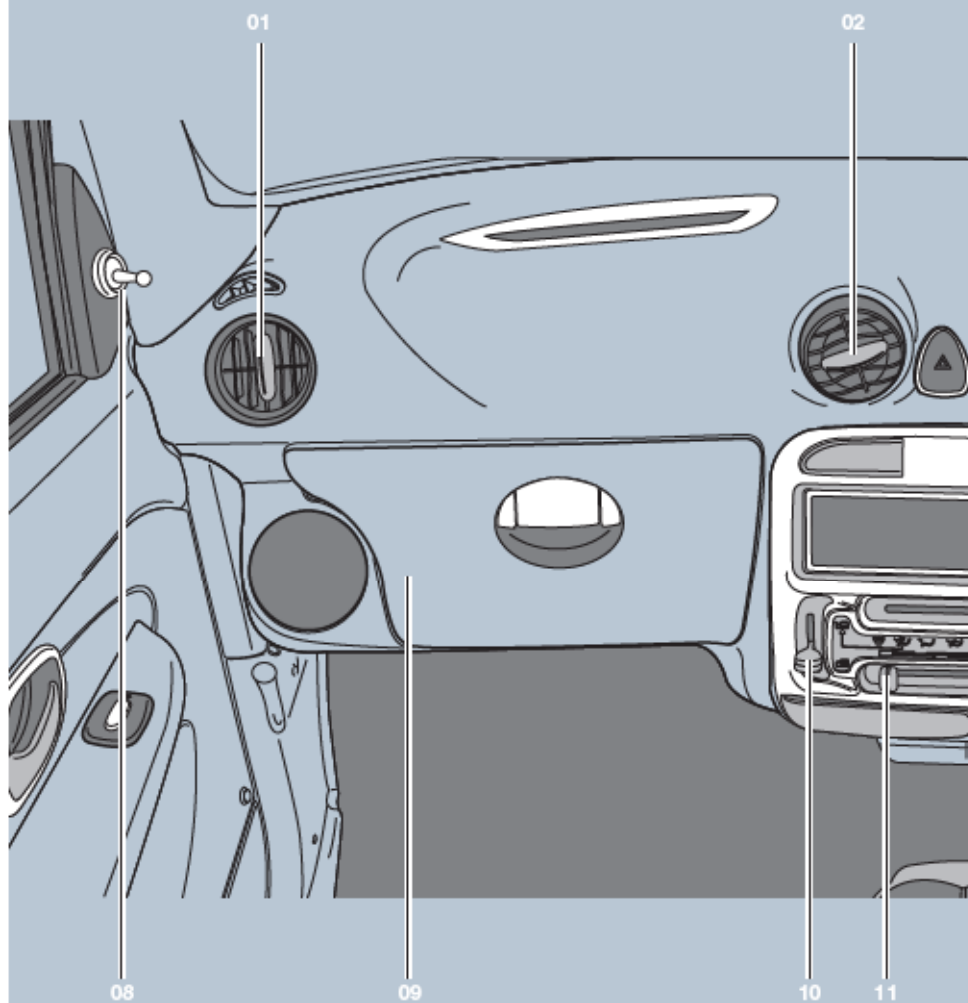

- 01. Side Air Vent Louver
- 02. Centre Air Vent Louver
- 03. Wind Shield Wiper / Washer
- 04. Engine Temperature Gauge

 
- 05. Speedometer
- 06. Fuel Gauge
- 07. Headlight/ Directional Signal Light Switch
- 08. Outside Rear View Mirror Control

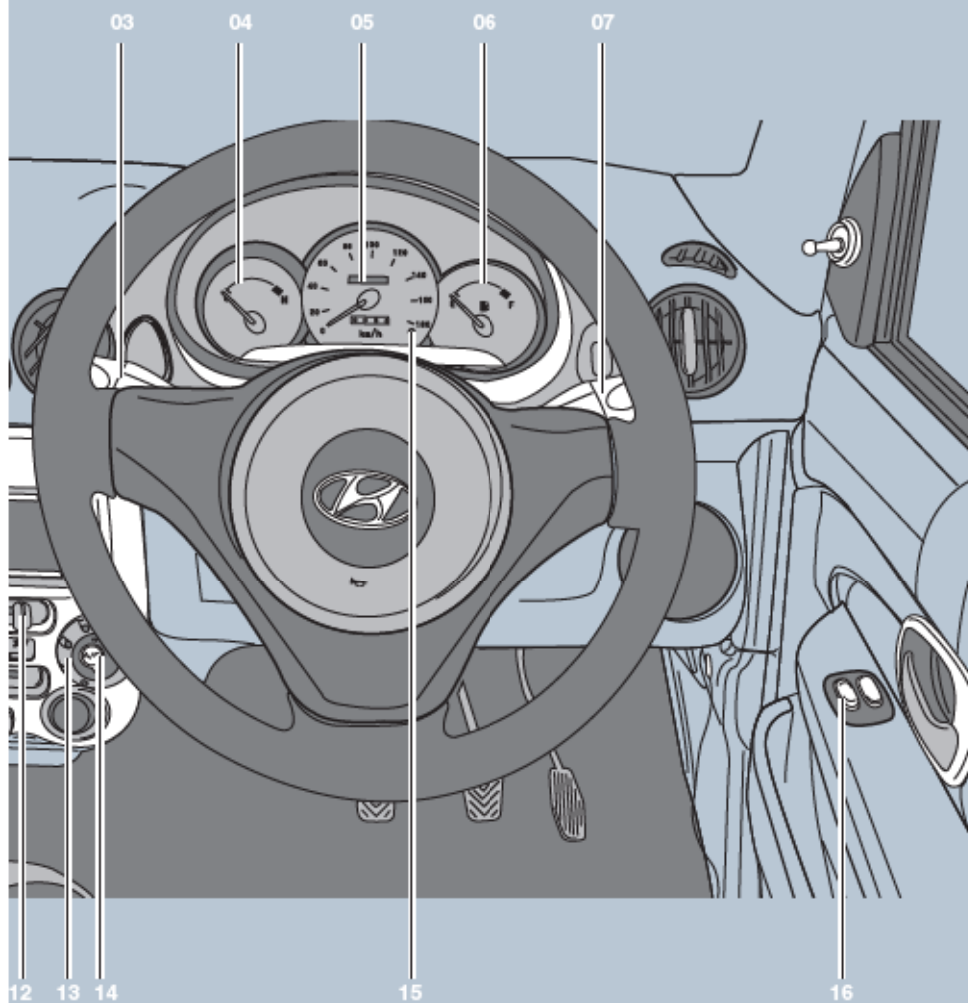

09. Glove Box
10. Air Intake Control
11. Temperature Control
12. Air Flow Control



 13. Fan Speed Control
14. AC "ON / OFF" Switch
15. Tripmeter
16. Power Windows Switch

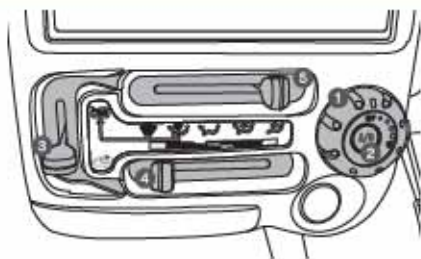HOW TO OPERATE CLIMATE CONTROL SYSTEM (IF A/C INSTALLED)




- 1. Fan Speed Control (Blower Control)**
This is used to turn the blower fan on and off and to select the fan speed.
- 2. AC "ON/OFF" Switch**
The air conditioning is turned on by pushing the AC button.
- 3. Air Intake Control**
This allows you to select fresh outside air or to recirculate inside air.
- 4. Temperature Control**
This is used to turn the heating system on and off and to select the degree of heating desired.
- 5. Air Flow Control**
This is used to direct the flow of air. Air can be directed to the floor, dashboard outlets or windshield.

HOW TO PREVENT WINDSHIELD FOGGING

 
- a) To prevent internal fog on windshield**
 - Use fresh air intake mode when A/C is OFF
 - Use A/C when its rain or high humidity season.
- b) To prevent external fog on windshield**
 - Operate A/C at low speed (Using A/C with high speed for long time, cause external window fogging.)
 - Do not turn the air vent louvers towards window side.
- c) To remove internal fog on windshield**
 - Set air intake to fresh air mode 
 - Set air flow to defrost 
 - Turn "ON" the A/C.
 - Set temperature control to desired position.
 - Set fan speed as required.
- d) To remove external fog on windshield**
 - Close air damper of side vent louvers or change air direction not to side window.
 - Operate A/C at low speed.
 - Operate windshield wiper if you need.
- e) Use Rear Defogger Switch to clear Rear Windshield fog (If installed)**
 - The rear windshield defroster is turned ON by pushing the switch.
 - After switching ON, defogger turns OFF automatically within 20 minutes
 - Use same switch to switch 'ON' and 'OFF'

DOES YOUR A/C GET COLD ENOUGH?

- If the interior of the car is hot when you first get in, open the window for a few minutes to expel the hot air.
- Set the recirculation mode  for higher A/C performs.
- Do not speed up quickly of your car. (the sudden acceleration can stop A/C for second.)
- Clean the A/C filter often. (if installed).

DAY/NIGHT REAR VIEW MIRROR

- Your Hyundai Santro is equipped with a day/night inside rear view mirror.
- The "night" position is selected by flipping the tab at the bottom of the mirror toward you. In the "night" position, the glare of headlights of cars behind you is reduced.

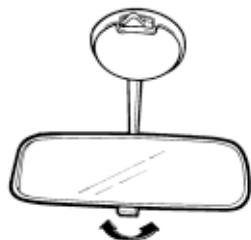

ADJUSTING THE OUTSIDE REAR VIEW MIRROR

MANUAL CONTROL (IF EQUIPPED)

 
The outside rear view mirrors are equipped with a control lever inside the cabin for your convenience.

To adjust an outside mirror, move the control lever located at the forward inside area of the window frame.




FOR SMOOTH GEAR SHIFTING

- Hyundai Santro has five forward and one reverse gear.
- The shift pattern is imprinted on the shift knob.
- Santro is equipped with conventional shift pattern.

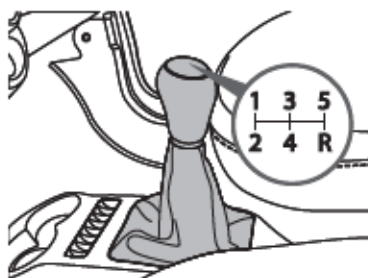

Note:

 - The clutch should be pressed all the way to the floor before gear shifting then released slowly after finishing gear change for smooth acceleration.
- When blocking happens during shift into reverse gear, slightly lift your foot to a quarter of the full stroke while pushing the lever to the reverse gear direction.
- There can be gear grinding noise if you shift into "R" position too quickly or with vehicle moving to prevent it move the liver into the "R" position after your car is completely stopped.

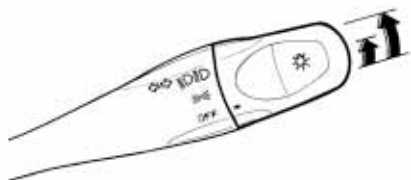

OFF – Headlights are off

 – Parking lights

 – Headlights

HEADLIGHTS

To operate the headlights, turn the barrel on the end of the multi-function switch. The first position turns on the parking lights, sidelights, tail lights and instrument panel lights. The second position turns on the headlights.

High And Low Beam

 
For high beams, push the lever forward (away from you) and for low beams, pull the lever back (toward you).

Headlight Flasher

To flash the headlights, pull the switch lever toward you, then release it. The headlights can be flashed even though the headlight switch is in the "OFF" position.

USING HEADLAMP LEVELING DEVICE

Headlight beam should be adjusted according to the number of passengers and the loading weight in the luggage area. The higher the number of the switch position, the lower the headlight beam level.

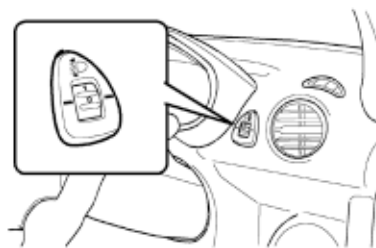


Listed below are the examples of proper switch settings.

Loading condition	Switch Position
Driver only	0
Driver + front passenger	0
Full passengers (including Driver)	1
Full passengers (including Driver) + full trunk Loading	2
Driver + Maximum permissible loading	3

HOW TO REMOVE HEADLIGHT CONDENSATION / MOISTURE


- After heavy rain or washing, mist/moisture can be formed inside headlight and taillamps due to temperature difference between lamp inside & outside.
- To remove the moisture formed inside the headlamp. Switch ON the headlamps for 30 minutes and the moisture will automatically disappear within 30 minutes.

 FOR CLEAR VISIBILITY DURING DRIVING

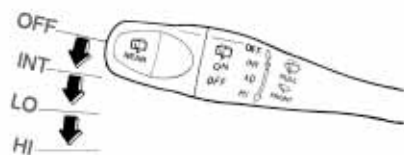


WIPER SPEED

 The windshield wiper switch has three positions: intermittent, low speed and high speed.

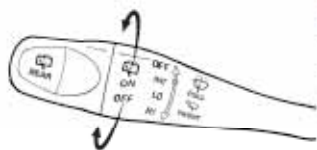


INTERMITTENT OPERATION (IF EQUIPPED)

 To use the intermittent wiper feature, place the wiper switch in the "INT" position.

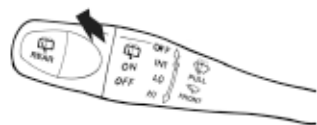

WIPE / WASH OPERATION

 To use the windshield washer, pull the wiper/washer lever toward you. When the washer is operated, the wipers automatically make three passes across the windshield. The washer continues to operate until the lever is released.

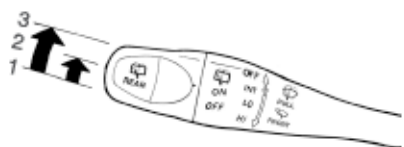


REAR WIPER / WASHER (IF INSTALLED)

The rear wiper/washer has three positions:

1. OFF
2. ON: The rear window wiper starts to operate continuously.
3. The washer fluid will be sprayed onto the rear window and the wiper operates while the rear window wiper barrel is placed in this position.

Note:

 - Use water additive for better wiping
- Get the Wiper inspected for proper cleaning & replace before monsoons.
- Lift the wiper blade while long parking for proper usage & life of wiperhead.

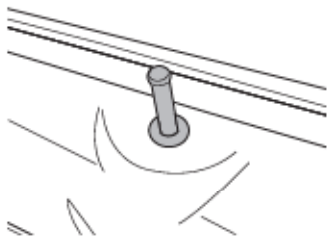

4. Panic Stage (if installed)

- Push 'Panic' button, (B)
 - Siren will sound and turn signal lamp will blink continuously.
- To turn off system press Panic button again.

REMOTE KEYLESS ENTRY (IF INSTALLED)

LOCK

Press lock button to lock all doors. Press again to hear confirmation chirp.

UNLOCK

Press unlock button to unlock the driver's door. Press again within four seconds to unlock all doors.

CENTRAL DOOR LOCKING SYSTEM (IF INSTALLED)

- Driver's door lock controls the central door locking system.
- When driver's door is locked the passenger doors also get locked automatically.

TO MAKE YOURSELF SIT COMFORTABLY

FRONT SEAT ADJUSTMENT

 
A. ADJUSTING SEAT FORWARD AND BACKWARD

To move the seat toward the front or rear, pull the lock release lever upward and adjust the seat.

When you find the position you want, "release the lever" and slide the seat forward or backward on its track until it locks into the desired position and cannot be moved.

B. ADJUSTING SEAT BACK ANGLE


Lift the lever on the side of the seat to adjust your seat back angle. Release the lever when you have found a comfortable position.

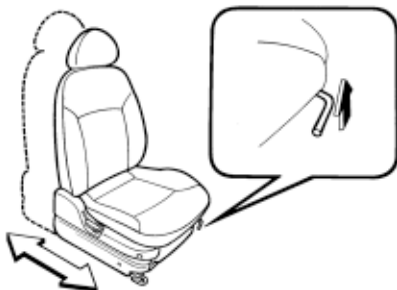

REAR SEAT ADJUSTMENT

The rear seatbacks may be folded down to facilitate carrying long items or to increase the luggage capacity of the vehicle as per the requirement.

 Pull up the seatback locking knob, then fold the seat toward the front of the vehicle. When you return the seatback to its upright position, always be sure it has locked into position by pushing on the top of the seatback.

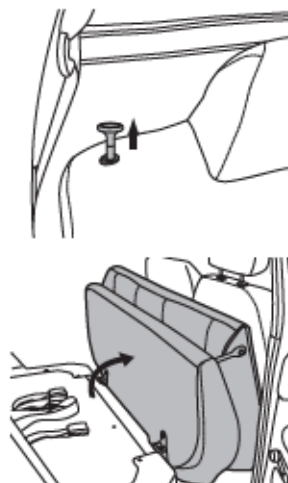


ADJUSTABLE HEADREST (IF EQUIPPED)

Headrests are designed to keep you neck comfortable while driving.

To raise the headrest, pull it up. To lower it, push down while pressing the lock knob.

 For maximum effectiveness the headrest should be adjusted so the middle of the headrest is at the same height as the top of the occupant's eyes.

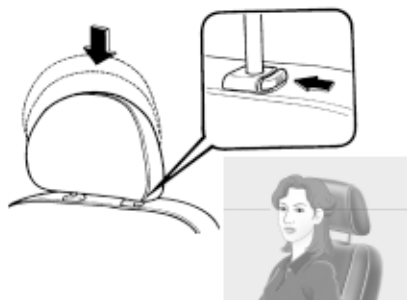

REMOTE FUEL-FILLER LID RELEASE (IF EQUIPPED)

 
The fuel-filler lid may be opened from inside the vehicle by pulling up the fuel-filler lid opener located on the bottom right driver side of the car.



REMOTE TAIL GATE RELEASE (IF EQUIPPED)

The tail gate is opened by pulling the lever to release the lock, then raising the tail gate manually.


To close, lower the tail gate, then press it down until it locks. To be sure the tail gate is securely fastened, always try to pull it up again.

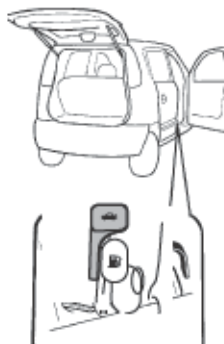

CAR MATS/CARPETS

Precaution for car mats / carpets

 - * Use car mats which are anti-slip and custom-fit for your vehicle.
- * If mats are damaged, replace them with new one.
- * Use only Hyundai genuine parts.
- * Floor mat should be be fixed with the provided hooks.
- * 2 Hooks at driver seat & 1 hook at passenger seat is provided which prevent floor mat from sliding forward and interfering with the pedals.

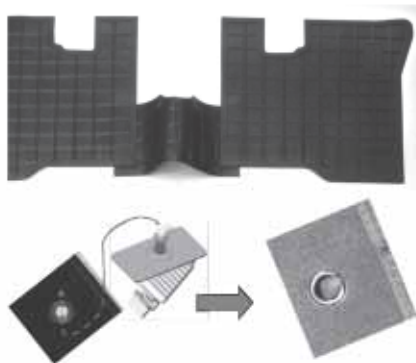

TIPS FOR IMPROVING FUEL EFFICIENCY & PERFORMANCE

Inflate tyres at correct pressure

- Maintain correct tyres pressure (30 psi).
Under inflation can add up to 10% extra fuel bill.

Maximise use of 5th gear & drive at cost conscious speed of 45-50 kmph.

- Maximise the use of 5th gear for better fuel economy. 5th over drive gear increases fuel efficiency by 20% to 25% as compared to 3rd gear driving.

Are you driving in low gears to make your engine a fuel-holic?

- Drive your car in correct gear.

Note:

It is wrong to assume the 5th overdrive gear is only for high speed highway driving. Use of 5th overdrive gear in city driving will greatly help to improve fuel economy.

Avoid frequent gear changes, acceleration & braking.

- Avoid frequent gear changes, acceleration & braking through planned driving by looking ahead and judging the speed of other vehicle & timing of traffic lights etc.

Idling car is the devil's workshop.

- Three minutes idling = 1 km lost. Do not keep the engine idling for more than 2 minutes while waiting for somebody, loading or unloading or while being stopped by congested traffic or signal.

Use air conditioner only when it is essential.

- Use air conditioner judiciously as it consumes around 20-25% of total fuel consumed.

Do not ride the clutch pedal.

- Do not ride the clutch pedal. This will cause its slippage resulting in more fuel consumption and damage to the clutch parts.

Travel light

- Take all unnecessary load off your car. Avoid carrying stuff you don't require for present trip. Travelling light allows your engine to run smoothly without washing effort & fuel.

Regular service saves fuel.

- Get your car regularly serviced & tuned for improved performance (ex. engine oil & filter).

Releasing Parking Brake before take off.

- Releasing Parking Brake fully before take off to avoid straining of Brakes & Engine.

Use Hyundai Genuine oil to increase the mileage.

- If you already know that good engine oil is vital to your engine's long life and smooth performance, it is rather easy to choose one. Use only Hyundai Genuine Oils for Engines, Transmission, Brakes and Radiator Coolant.



Note :

Driving habit and traffic condition will effect the fuel economy.

SAFETY INFORMATION

BASIC SAFETY PRECAUTIONS

1. Whenever operating the vehicle, make sure that you and your occupants are properly wearing seat belts.
2. Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
3. Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment (if installed).
4. Always refer to the Owner's Manual for complete safety precaution information.
5. Stopping distance increases with increasing vehicle speed. Apply brakes well ahead of the stopping points.

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage *	
	Inspect	Replace	Inspect	Replace
Air Cleaner Filter	10 K	20 K		More Frequently
Engine oil & filter	-	10 K	-	5 K
Vacuum Hose & Crankcase Ventilation Hose	10 K	-		
Air Conditioning Refrigerant	10 K	-		
Automatic Transaxle Fluid	10 K	80 K		45 K
Brake Hoses & Lines	10 K	-		
Brake Pads , Calipers & Rotors	10 K	-	More Frequently	
Drive Shaft & Boots	10 K	-		
Exhaust Pipe & Muffler	10 K	-		
Steering Gear Box , Linkage & Boots/Lower Arm Ball Joint	10 K	-	More Frequently	
Suspension	10 K	-		
Brake Fluid	10 K	30 K		
Coolant	10 K	30 K		
Drive Belt (Alt, Water Pump, A/C)	10 K	-		
Manual Transaxle Oil	10 K	30 K		15 K
Power Steering Pump, Belt & Hoses	10 K	-		
Rear Brake Drums/Linings, Parking Brake	10 K	-	More Frequently	
Spark Plugs	10 K	30 K		More Frequently
Timing Belt	10K	80 K		60 K
Fuel Filter	10 K	30 K		

*All Units Displayed in Kilometers

For Additional Maintenance Schedule Information See Your Owner's Manual

Looking For More Detailed Information ? This Quick Reference Guide does not replace your vehicle's Owner's Manual . If you require additional information or are unsure of a specific issue , you should always refer to the vehicle's Owner's Manual or contact our authorized Hyundai dealer.